

CHECK THAT THE CORRECT PIPE COVER HAS BEEN CHOSEN FOR THE WATER HEATER MODEL YOU ARE INSTALLING


PC 11 / *PC11D		PCV01	
INFINITY 26	REU-VR2626WG	INFINITY 26i	REU-VRM2632FFUG
INFINITY 20	REU-VR2024WG	HD 200i	REU-VRM2632FFUC **
INFINITY 16	REU-VR1620WG	HD200e	REU-VRM2632WC **
*V1500	REU-VR2426WB		
*V1200 / B20	REU-VR1620WB	PCV02	
INF16	REU-VRM1620WG	INFINITY 32	REU-VR3237WG
INF20	REU-VRM2024WG	INFINITY 32	REU-VRM3237WG
INF26	REU-VRM2626WG	HD 250e	REU-VRM3237WC **
*B26	REU-VR2626WB	INFINITY 26 Smartstart	REU-V2626WGP
*B20	REU-VR2024WB	INF26 Smartstart	REU-VR2626WGP
*B16	REU-VR1620WB	PCK01	
		ENVIROSMART	REU-K2430WG

*PC11D = Dune colour, all other Water Heater models are white

** The pipe cover is not available in the HD Water Heater colour.

GENERAL INSTALLATION INSTRUCTIONS

1. Install INFINITY and connections.
2. Remove the two screws (A) located on the lower side of the INFINITY.
3. Hold the pipe cover in the correct position and mark the position of the securing holes of the rear bracket.
4. Attach the bracket to the wall with suitable fixings.
5. Secure the pipe cover to the INFINITY with the screws (A).
6. Secure the pipe cover to the bracket. (These holes are elongated to allow for uneven walls).
7. Fit the front panel.

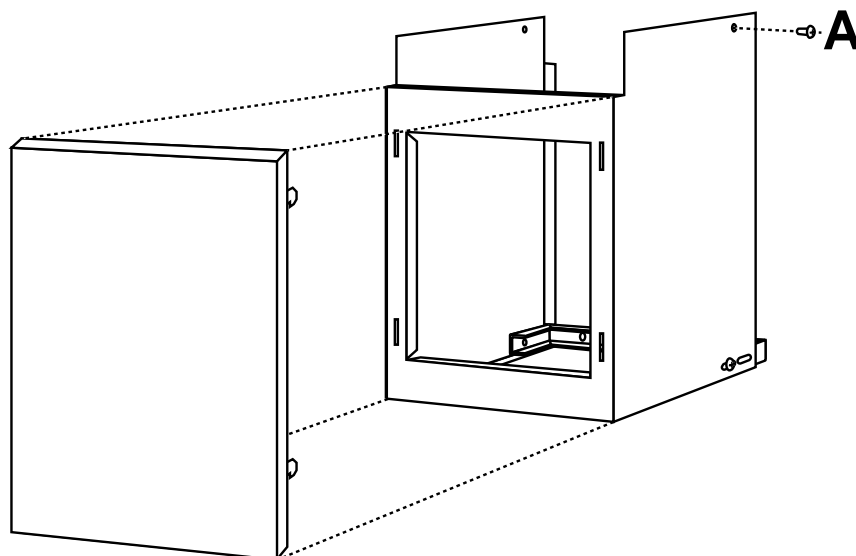

Check Data plate for Model Number

JOINING MULTIPLE PIPE COVERS

Pipe covers may also be joined together to extend the length to cover pipes, to do this:

1. Install the first pipe cover to the INFINITY as per the above instructions.
2. Repeat installation for each additional pipe cover, it will be necessary to mark and drill the hole (A) and screw to the above pipe cover.

PIPE COVER MOUNTING HOLES ‡

For models REU-VR/VRM2626WG, REU-VR/VRM2020WG, REU-VR/VRM2018WG and REU-VR/VRM1616WG it may be necessary to drill two pipe cover mounting holes into the water heater casing, if this is so do the following.



WARNING

ENSURE THAT THE POWER SUPPLY IS ISOLATED BEFORE DRILLING INTO APPLIANCE CASING.


1. Hold the pipe cover in the correct position and mark location of mounting screws (A) on the lower sides of the INFINITY.
2. Carefully drill 3mm hole in side panel of INFINITY to align with mounting holes already drilled in pipe cover.



CAUTION

REMOVE APPLIANCE COVER TO BE ABLE TO OBSERVE THAT THE DRILLED HOLE DOES NOT DAMAGE ANY COMPONENTS INSIDE THE INFINITY.

3. Using a short self tapping screw, secure the pipe cover to water heater.

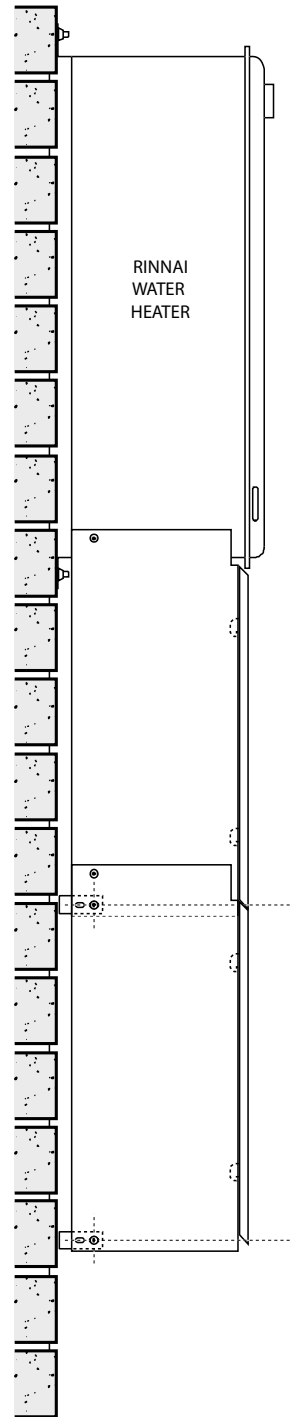

Rinnai Australia Pty. Ltd. ABN 74 005 138 769

Head Office

100 Atlantic Drive,
Keysborough, Victoria 3173
P.O. Box 460
Braeside, Victoria 3195
Tel: (03) 9271 6625
Fax: (03) 9271 6622

Internet: www.rinnai.com.au E-mail: enquiry@rinnai.com.au

National Help Line

Tel: 1300 555 545*
Fax: 1300 555 665*

**Cost of a local call Higher from mobile or public phones.*

Hot Water Service Line
Tel: 1800 000 340