

Enviroflo A Series Heat Pump

EHPT180VM

ERROR CODES

Fault Code	Description
E0	Parameter error fault
E1	Water temperature sensor
E2	High voltage fault
E3	Fin temperature sensor
E4	Ambient temperature sensor
E5	Return air temperature sensor
E6	Exhaust temperature sensor
E7	Low pressure protection
E8	Hot water temperature sensor
EA	High temperature protection of compressor exhaust air
Ed	Antifreeze protection
Et	The ambient temperature is not in the operating range of the heat pump
EE	High compressor current

Continued next page

Fault Code	Description
Eb	Low compressor current
EF	Communication fail