



ERROR CODES

| Error code | Error Description | Possible Causes |
|------------|--|----------------------------------|
| E01 | Ambient Temperature sensor fault | Sensor fault/connection is loose |
| E02 | Upper tank temperature sensor fault | Sensor fault/connection is loose |
| E03 | Discharge temperature sensor fault | Sensor fault/connection is loose |
| E04 | Evaporator temperature sensor fault | Sensor fault/connection is loose |
| E05 | Suction temperature sensor fault | Sensor fault/connection is loose |

| Error code | Error Description | Possible Causes |
|------------|-------------------------------------|--|
| E06 | Lower tank temperature sensor fault | Sensor fault/connection is loose |
| E07 | High pressure swithc protection | Pressure switch is open circuit/connection is loose/ EEV fault/ Refrigeration system is blocked |
| E08 | Discharge temperature too high | Lack of refrigerant/system leak |
| E09 | Low supply voltage | Main power voltage is too low |
| E10 | High supply voltage | Main power voltage is too high |