



ERROR CODES

Error code	Error Description	Possible Causes
E01	Ambient Temperature sensor fault	Sensor fault/connection is loose
E02	Upper tank temperature sensor fault	Sensor fault/connection is loose
E03	Discharge temperature sensor fault	Sensor fault/connection is loose
E04	Evaporator temperature sensor fault	Sensor fault/connection is loose
E05	Suction temperature sensor fault	Sensor fault/connection is loose

Error code	Error Description	Possible Causes
E06	Lower tank temperature sensor fault	Sensor fault/connection is loose
E07	High pressure swithc protection	Pressure switch is open circuit/connection is loose/ EEV fault/ Refrigeration system is blocked
E08	Discharge temperature too high	Lack of refrigerant/system leak
E09	Low supply voltage	Main power voltage is too low
E10	High supply voltage	Main power voltage is too high