

Ultima II Gas Flued Space Heater

ERROR CODES

Code	Probable Cause	Suggested Remedy
---	Power Failure	Press the ON/OFF button 2 twice to reset the heater
00	Power Outage	As above
11	Ignition Failure	Check gas supply is turned on, turn the heater OFF and then ON again. If the heater fails to ignite after 4 attempts a Service Call will be required
12	Flame Failure	As above
14	Overheat	Clean air inlet. If error continues a Service Call will be required
16	Room Overheat	Lower room temperature to below 40°C
31	Room temperature Sensor Faulty	Service Call
33	Overheat Temperature Sensor Faulty	Service Call
35	Flue Temperature Sensor Faulty	Service Call
53	Sparker Failure	Service Call
61	Combustion Fan Failure	Service Call
70	ON/OFF Switch Faulty	Service Call
71	Solenoids Faulty	Service Call

72	Flame Rod Faulty	Service Call
90	Flue Blockage / Exhaust temperature	Service Call